

# CANTERBURY

## FLOOR POLISHER

cleaning | scrubbing | sanding

Please find the following correct procedure for the operation of the Canterbury Vacuum Sander

1. Plug in power cable.
2. Tilt the machine back by using the handle.
3. Place the sanding disc onto the pad to the pad holder
4. Once the Disc is fitted stand the machine back up.
5. Slightly lift the handle up, and manoeuvre the wheels backwards and up out of the way (the wheels must be off the floor when polishing).
6. The handle height must be adjusted to suit the individual operators body proportions. Adjust the Canterbury handle grip, to the correct height by loosening the slide knob adjustment on right side of column, positioning the handle and then tighten. The correct height of the handle is specific to operator's preference
7. When the handle is set at the correct height, the arms should grip the handle in a comfortable, but loose manner (if your arms are bent at the elbows this is an indication that you are applying too much effort to control the machine) Readjust the handle.
8. To start the machine, pull the hand trigger, and the motor will engage the brush. Do not force the trigger
9. To facilitate the correct swinging motion of the machine, tip or lift the handle slightly forward to get the sander to move right and lower the handle to get the machine to move towards the left. This requires minimal effort. So, if you are having difficulty controlling the machine, check that you have the handle set at the correct height or your pad holder or sanding disc mechanism is damaged.
10. To use the vacuum system whilst sanding, switch the vac motor to the on position. The vacuum will be activated upon starting the machine

### GENERAL INSTRUCTIONS

**DO'S** • Clear the floor of sharp objects. • Always work away from the cord. . • Always clean the machine after use and store in a safe dry environment. • Walk at a comfortable walking speed. • Ensure the skirt is neatly around the machine when stored.

**DONT'S** • Don't use more than 20m extension leads, and ensure it is rated to 15amps. • Don't store heavy items on the machine as it distorts the skirt and thus it will not perform as efficiently. • Don't run with the canterbury, however you CAN walk backwards. • Don't leave the brush/pad on the machine when storing as it could distort. • Don't run the machine over the power cord.



# CANTERBURY

F L O O R P O L I S H E R

cleaning | scrubbing | sanding

Please find the following Canterbury Vacuum Sander warranty

H.D Rossiter and Sons Engineering P/L hereinafter called the manufacturer, warrants all Canterbury machines and Components of machines which are wholly of their manufacture against faulty workmanship or material, for a period of twelve months from date of delivery, to original purchaser. Subject to the following conditions.

1. All parts claimed as faulty must be returned to the manufacturer for inspection, this must be on freight pre-paid basis. The Manufacturer will return the repaired or replaced item freight-on (repair or replacement of said part or parts to be at the discretion of Manufacturer)
2. This warranty shall not apply to expendable parts of machine eg. Brushes, skirts, hoses, electrical leads etc.
3. This warranty will be void if any attachment or equipment not made, supplied or recommended by manufacturer is used
4. No charge for outside labour will be accepted by the manufacturer
5. In the case of components made by other manufacturers such as electric motors, vacuum motors, switches and the like, any warranty given by such manufacturers will be passed on by the manufacturing company